INSTRUCTION MANUAL 070009

1.Brief introduction

Our factory design and producethe two channelwireless intellect receiving control what can provide switch signal to the two relays, so it can meet many requirements such as: control motor's corotationand reversal;the connection and lock of the switch and other special control programs. This kind of wireless intellect receiving control main apply to auto door, curtain, lifting appliance, gate way, lifter, industrial control and security field.

This kind of wireless receiving control is high confidentiality, large memory space, stable characteristics, low power consume and very convenience, it is unnecessary adopt the traditional wire jumper or dip switch code but only receive and store the wireless signal from the remote control, and The lost learnt control can not work if you delete the memory message of the receiving control, however, it shouldlearning again by the owner ifwant to obtain the right of use.

2.The way of output

- A. Signalkeeps 8seconds--"1" connect
- B. Signal self-locking -- "2" connect
- C.Signal interlock--"3" connect
- D. Signal point start--disconnect

(check the Circuit diagram for details)

3. Learning way and steps

Learning fixed code & learning code:

- 1. Press learning key of receiver—the pilot lamp light—release learning key and pilot lamp extinguish, indicate enter into the status of learning.
- 2. Press any button of the remote control, indicate learning success as the pilot lamp flash 5 times and automatically exitlearningstate. Receiver automatically exitlearningstate if you do nothing in 32 seconds. (Can store up to 30pcs this type remote control)

Learning rolling code:

- 1. Press learning key of receiver—the pilot lamp light—release learning key and pilot lamp extinguish, indicate enter into the status of learning first time.
- 2. Pressany button of the remote control, indicate first time learning success as the pilot lamp keep flashingslowly.
- 3. Repeat the operation of step "1", enter into the status of learning second time.
- 4. Press the same button in step "2", the pilot lamp flash 5 times, learning successful.(Can store up to 6pcs this type remote control)

4. Delete memory message

Press the learning key of the receiver—pilot lamp light—hold on pressing over 8 seconds until the pilot lamp extinguish, which indict success to delete the memory message.

5.Main Technique AC 220V

DataInputvoltage

Static working current ≤7mA

Working temperature -40°C~+80°C

Receiving sensitive ≥-105dBm





